

## AC Aircraft Types and serial ranges and Corresponding Engine models

OEM/Core Engine Models	Aircraft Model	Engine Serial range	XP Engine Placements
PT6A-20	King Air A90	LJ-500 and below	XP21 OR XP28
PT6A-21	King Air C90; C90A; C90B	LJ-501 to L-900	XP135A
PT6A-28	King Air E90	LW-2 to LW-333	XP135A
PT6A-135	King Air F90	LA-2 to LA-56	XP135A
41 or 42	King Air A200's	BD-xxx serial numbers	XP42
PT6A-41	King Air 200	BB-002 to BB-990	XP42 OR XP52 or XP61
PT6A-42	King Air B200	BB-991 and up	XP52 or XP61
41 or 42	King Air 200C; King Air B200C	BL-001 to BT-009	XP52 or XP61
41 or 42	King Air 200T; King Air B200T	BT-001 to BT-016	XP52 or XP61
41 or 42	All King Air 200's	BC-xxx serial numbers	XP52 or XP61
41 or 42	All King Air 200's	BN-xxx serial numbers	XP52 or XP61
PT6A-112	Conquest I	425 all serials	XP135A
PT6A-11	Cheyenne I; IA;	31T All serial numbers	XP135A
PT6A-28	Cheyenne II	31T All serial numbers	XP135A
PT6A-135	Cheyenne IIXL	31T All serial numbers	XP135A
PT6A-114A	Caravan 208B	All serials	XP42A only ONE engine
PT6A-114	Caravan 208	All serials	XP42A only ONE engine

Information is for reference only. DAS is not responsible for any discrepancies in any of the facts detailed above.